


ROUND METAL


CEILING LOUDSPEAKERS

RCS5/FTSL


Installation instructions

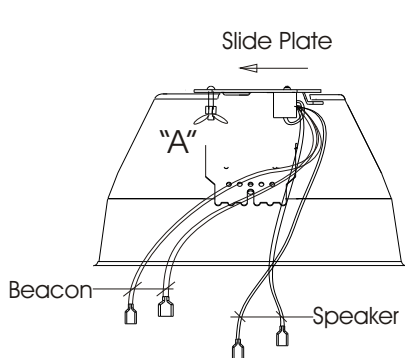


- 1/ Loosen wingnut "A"
(you will NOT have to remove the wing nut completely)
- 2/ If the wingnut is on e.g. your left slide the whole plate to the left.

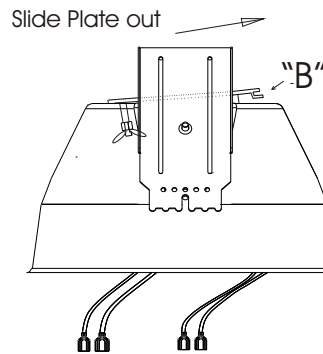


- 3/ This will disengage the retaining clip "B"
- 4/ Lift the plate slightly @ "B" and slide the plate right until clear of the dome.

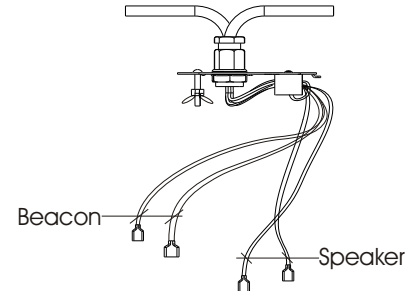

- 5 / Wire plate with both Beacon & Speaker circuit.

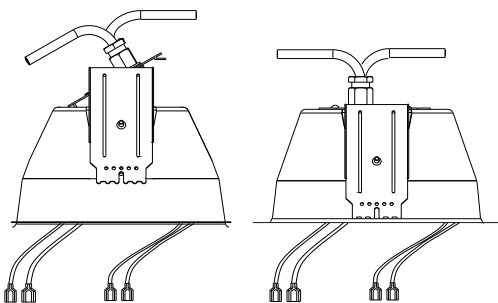


- 6 / Re fit plate to dome and tighten wingnut

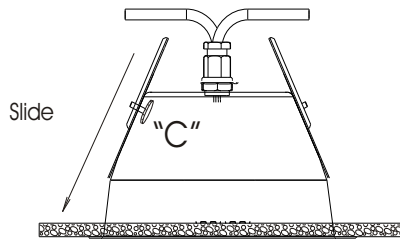


Fitting the dome into a ceiling


- 7/ Loosen the retaining knob for slider "C"
Push sliders to the top of the dome and insert dome into pre-cut hole.

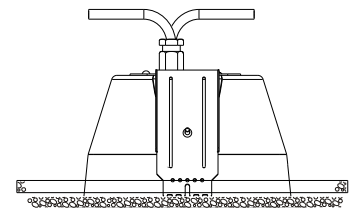

- 8/ Once dome has been inserted pull the slider knob down until it clamps to the ceiling. Tighten the retaining knobs to secure the dome.


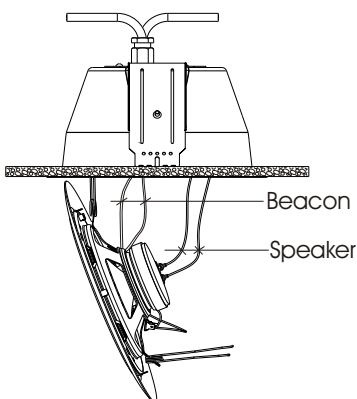


- 9/ Fitting the speaker.
Compress "V" spring and fit into the retaining ear within the dome.
Connect leads to the speaker transformer and terminations for Beacon.

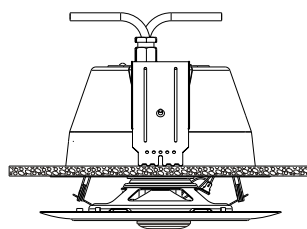

- 10 Fit second "V" clip into second retaining ears and gently push the speaker up into the dome (do not push the central perforated grille area)
the speaker will self locate into the dome.

 Circuit Diagram

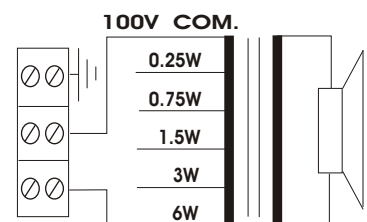

Hole cutout
RCS5FTS 164mm