





VANDALPROOF METAL CABINET IOUDSPEAKER


Sentry6/STCL

Installation instructions


You can cable this unit through the 1 x 20mm cable entry within the back of the unit or by the 2 x 20mm gland entry's provided.

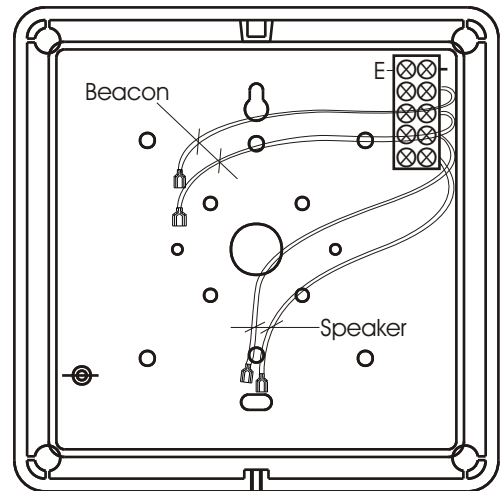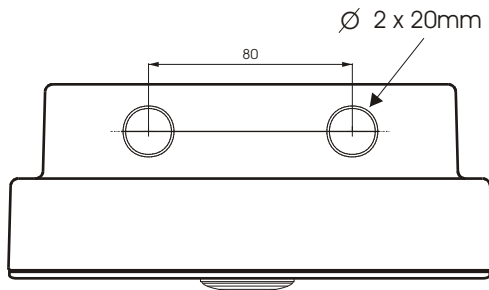

Once the cables come through the back box terminate to the terminal block. Connect the speaker flying leads to the speaker unit and select the required power. Also connect the Beacon flying leads to the Beacon terminations. Slot the speaker location plate under the retaining lug "A" and position the front plate square into the back box. Tighten the Grub Screw "B" to secure the speaker into the enclosure.

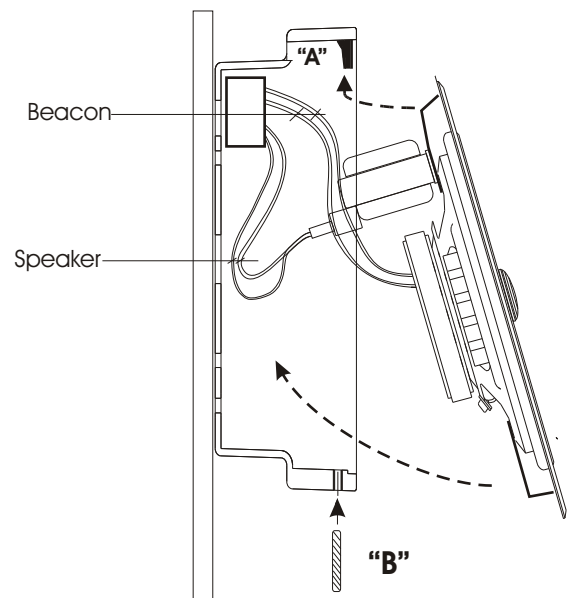

100V Line common wire - Thermal Fuse

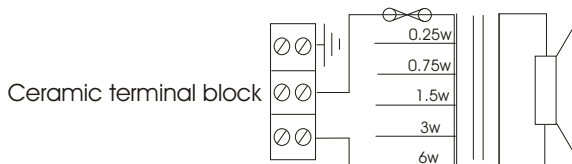

Circuit Diagram

