




MOULDED CABINET LOUDSPEAKERS

PMC4/T


PMC4/TC

Installation instructions


Measurements: mm

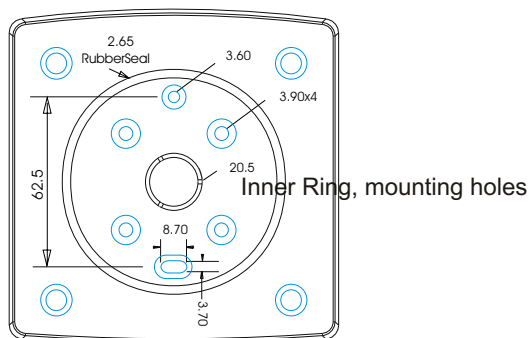


RearView

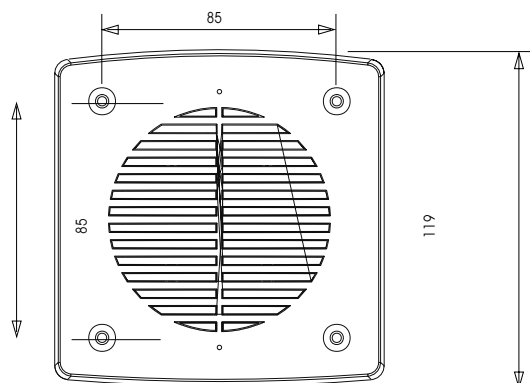

FrontView

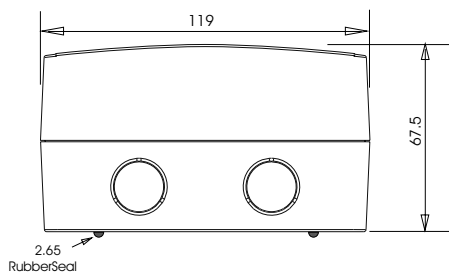

TopView

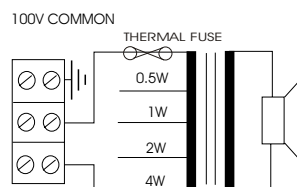

CircuitDiagram

1. On selecting the chosen position for the loudspeaker please ensure that cable gland entries situated in the back box are in the position you require. (Either 2 x 2 at the top with one at either side or one at the top and bottom with two at one side)
2. Offer the speaker to the wall or ceiling and mark through the mounting holes as shown in the rear view drawing above with a sharp pencil the position required for drilling. It is important that you use the holes situated within the rubber seal.
3. Drill 2 holes in any chosen position and then fit the back box including rubber seal to the wall/flat surface.
4. Cabling can now take place, connect the 100 volt line supply to your required volume (via transformer tapings) as shown on the circuit diagram.
5. With the cable in place the speaker (shown in front view drawing) can be screwed through the mounting holes into position.