




ROUND METAL CEILING LOUDSPEAKERS

RCS8/T

RCS8/FTS

Installation instructions

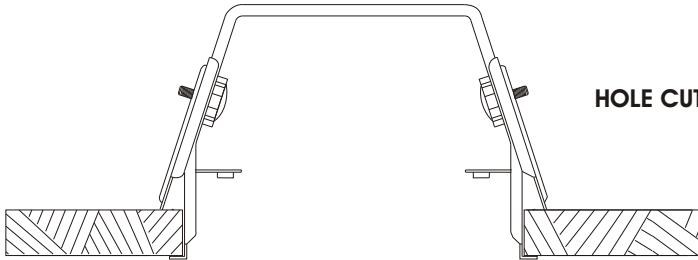


HOLE CUTOUT REQUIRED FOR RCS8/T = 238mm

Place the mounting bracket inside the ceiling aperture and secure it with the two black knobs

Place the mounting bracket inside the ceiling aperture and secure it with the fixing bracket


FIREDOME VERSION

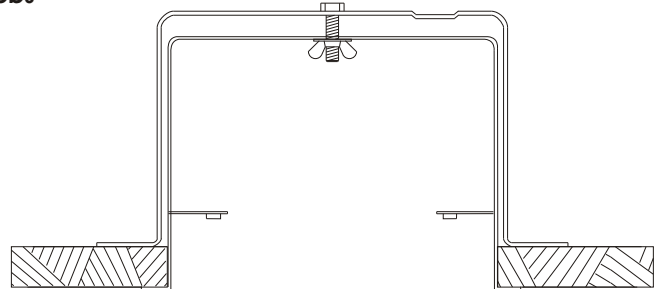


HOLE CUTOUT REQUIRED FOR RCS8/FTS = 246mm

Hang one of the speaker suspension springs on the hook of the fire dome or mounting bracket
Note: the angled part of the mounting spring must point towards the centre of the speaker

MOUNTING LOUDSPEAKER

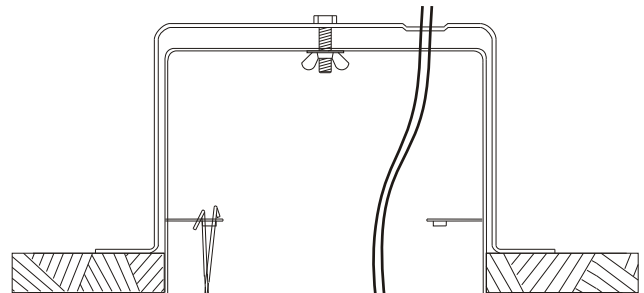


Hang the other spring on the other hook

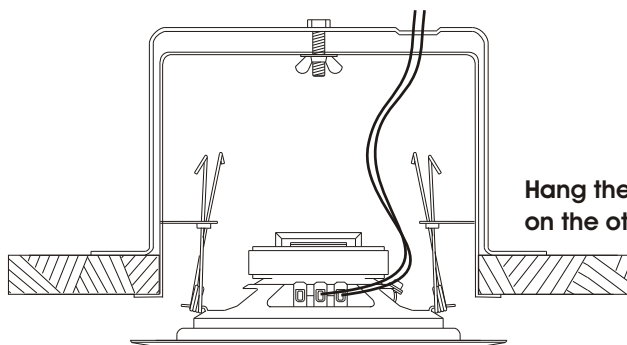

Push spring towards the hole

Connect 100 volt line to terminal block as shown.
See transformer diagram for volume (watts) tapping below

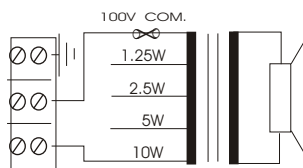

RCS8/T & RCS8/FTS Circuit Diagram