





VANDALPROOF METAL CABINET LOUDSPEAKER

SENTRY6/TBBC

Installation instructions


You can cable this unit via either the cable hole in the back of the unit or by using the 20mm cable entries at the top of the back box. Secure the back box into a 170 x 170 x 70mm Cavity using the fixing holes provided.

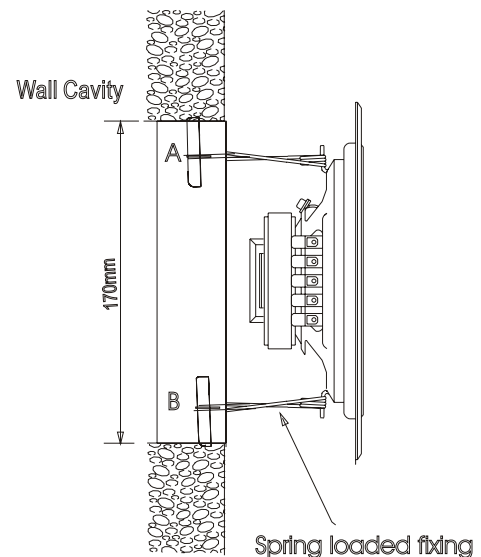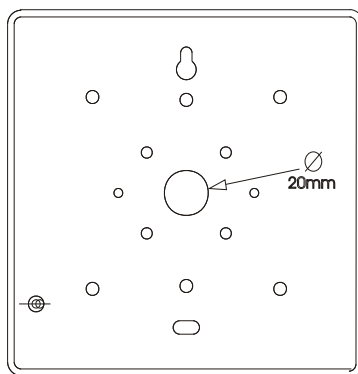

In Wall Version

Once you have brought the cable through the back box terminate it into the ceramic block selecting the required power setting, See circuit diagram below. Slot the speaker retaining springs "A" and "B" into the clamps provided and push back until the unit is locked in place.

100V Line. COMMON WIRE-THERMAL FUSE

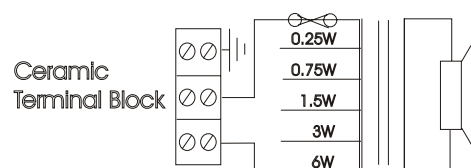

Circuit diagram